## MOTOR POWER SUPPLY CONNECTOR Configuration to use) MOTOR POWER SUPPLY CONNECTOR Configuration to use) POWER SUPPLY CONNECTOR POWER SUPPLY CONNECTOR DRIVE SELECT 1 CONNECTOR DRIVE SELECT 0